HOM-E-QUIP
STORAGE SYSTEMS

cabinette

MODEL 6601

ASSEMBLY INSTRUCTIONS

TIPS FOR INSTALLER

CHECK SHIPMENT: Immediately after receipt of shipment, check the condition and number of packages against the packing list and bill of lading. Any shortage or damage of packages should be noted on carrier's freight receipt. Any claim for loss or damage must be handled by the consignee, however, this company will provide any necessary assistance. Shortages or errors made by this company should be reported at once.

DISTRIBUTE MATERIALS: Check each part with parts list (page 2) as they are unpacked. Place parts in the approximate location where unit is to be assembled.

EDSAL Storage Cabinets are quality built and finished. Care should be used in handling to avoid damage.

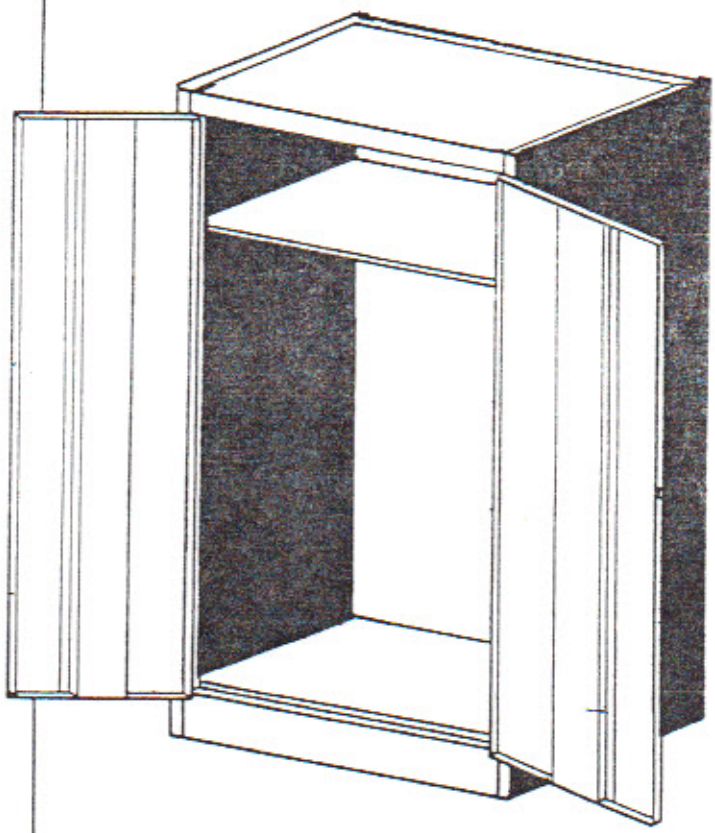

HOM-E-QUIP CONSUMER PRODUCTS DIVISION
EDSAL MFG. CO.
4400 S. Packers Ave. • Chicago, IL 60609

Parts for storage cabinets

SPLIT-BACK (Two (2) per cabinet)

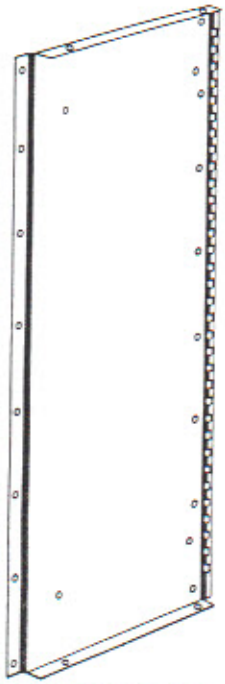

NOTE:
Illustrated is back in right side position.

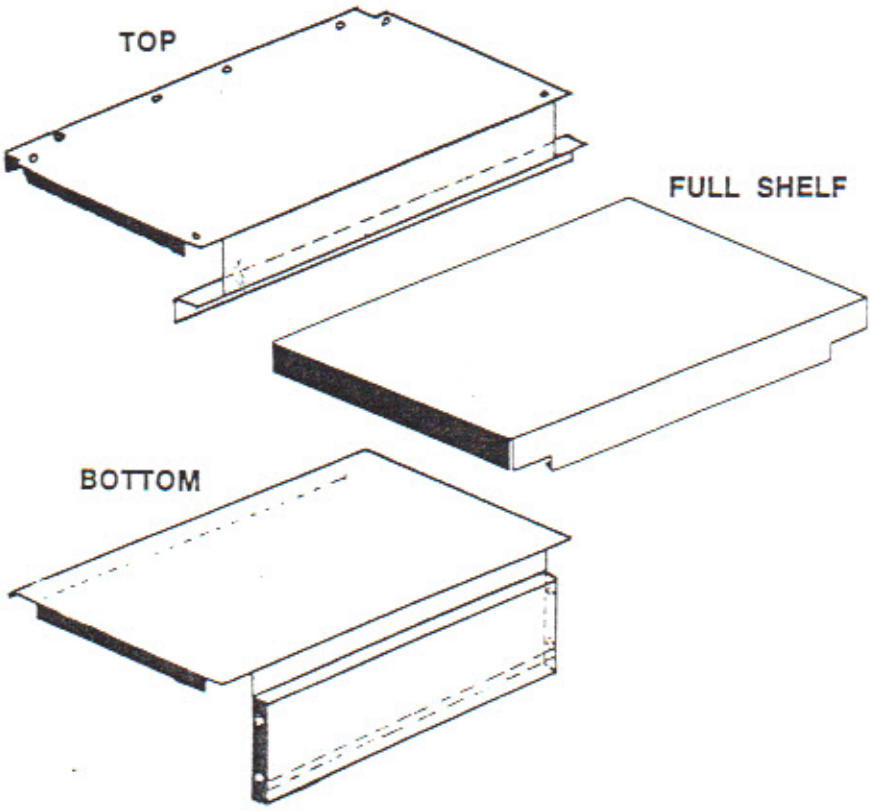

DOORS

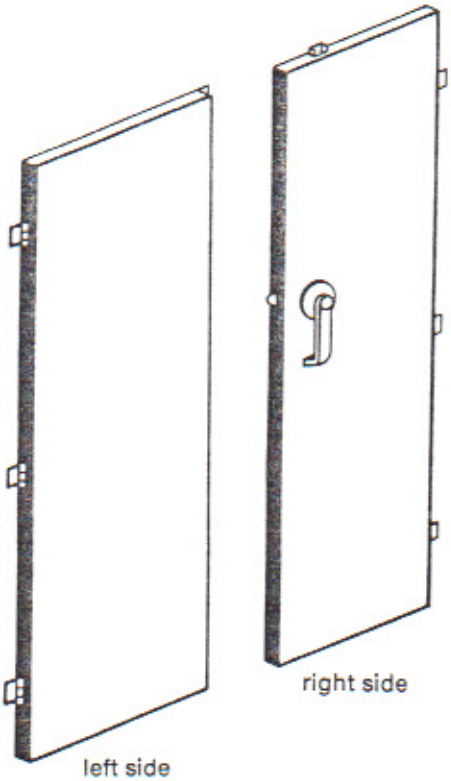

CABINET END (Two (2) per cabinet)

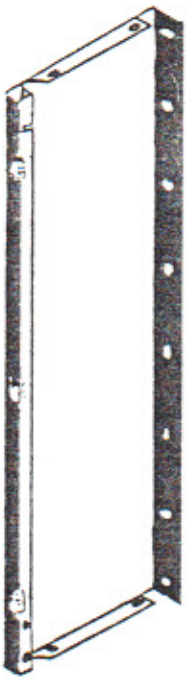

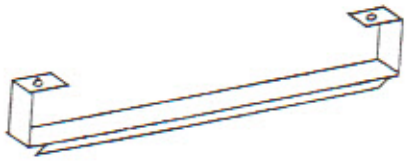

COAT HANGER

SHELF BRACKET

BOLTS & NUTS

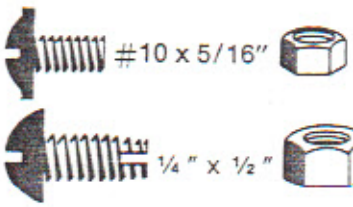

Assembly Instructions Model 6601

1. Place two Split-Backs on horse or other support for elevation. (By taking one of the two Backs and turning upside down, you have both a right and left Split-Back). The offset edge of right Split-Back should overlap offset edge of left Split-Back. The two Backs should now be bolted with #10 x 5/16" bolts and nuts. (see figure A)

2. The Top is now put into position **Under** top flanges of back and sides. Using #10 x 5/16" bolts, attach Top to Back by bolting through from flange side. (see figures B & C)

3. Next, bolt the right and left Cabinet Ends to right and left Back edges and to the top. Use #10 x 5/16" bolts. Top flange of Cabinet End should be over Cabinet Top. (see figures A & B)

4. Position Bottom flange of Top thru the slot located on the Cabinet Ends. (see Figure B)

5. Position Cabinet Bottom between Front edges of Cabinet Ends at Lower End and Bolt with four ½ bolts. (see Figures B & D)

6. Position Cabinet Bottom and attach to Back and Base with #10 x 5/16" bolts. (see figures B & C)

7. Hang right and left hand Doors to the Split-Hinges welded to the end. (see figure A)

8. Unit may now be set upright. To install shelf first insert Shelf Brackets in the adjustment slots located in the front edges of the Cabinet Ends. Now insert rear corners of shelf in shelf adjustment slots located at either end of back. The front corners of Shelf rest on and are supported by the Shelf Brackets. (see figure C). Position Coat Hanger as shown (see figure C) with 2 #10 Bolts and Nuts.

9. Install 3 Point Locking Handle on right side door, following carefully instructions included in handle hardware package (note that Locking Handle is used with 2 locking bars.)

10. To insure that the doors will operate properly, **PLACE THE CABINET IN ITS PROPER POSITION AND PLACE SHIMS UNDER THE CORNERS, WHERE REQUIRED, SO THE UNIT WILL BE LEVEL.**

FIGURE A

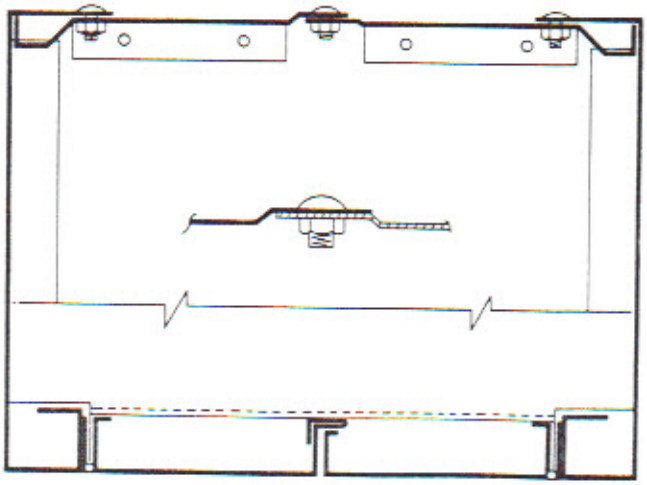

FIGURE B

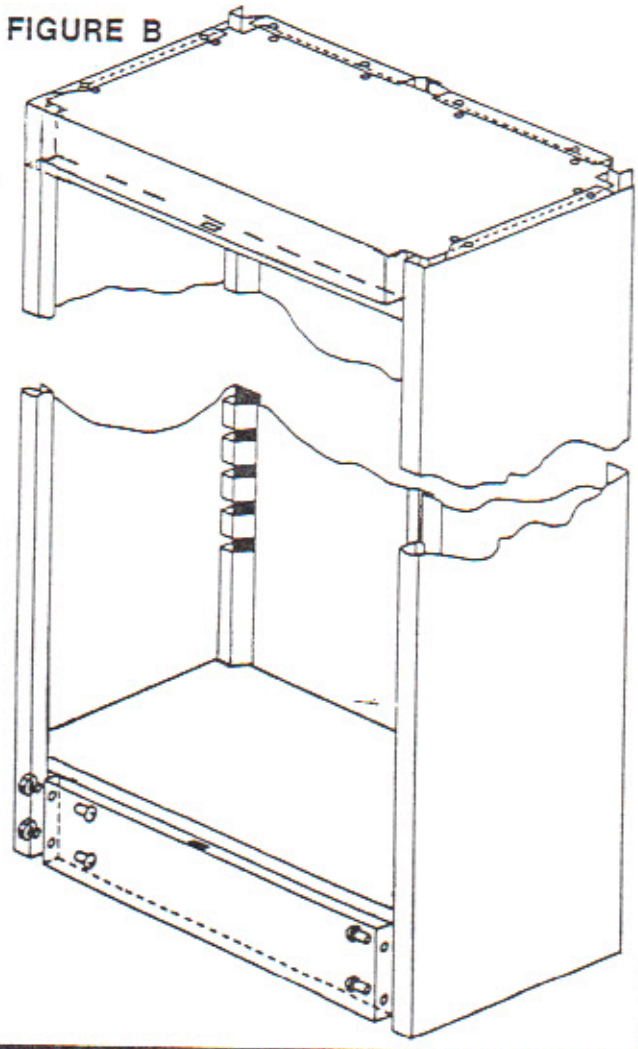

FIGURE C

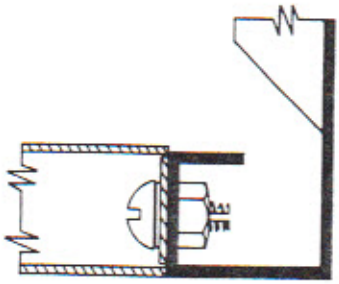

FIGURE D

IMPORTANT:

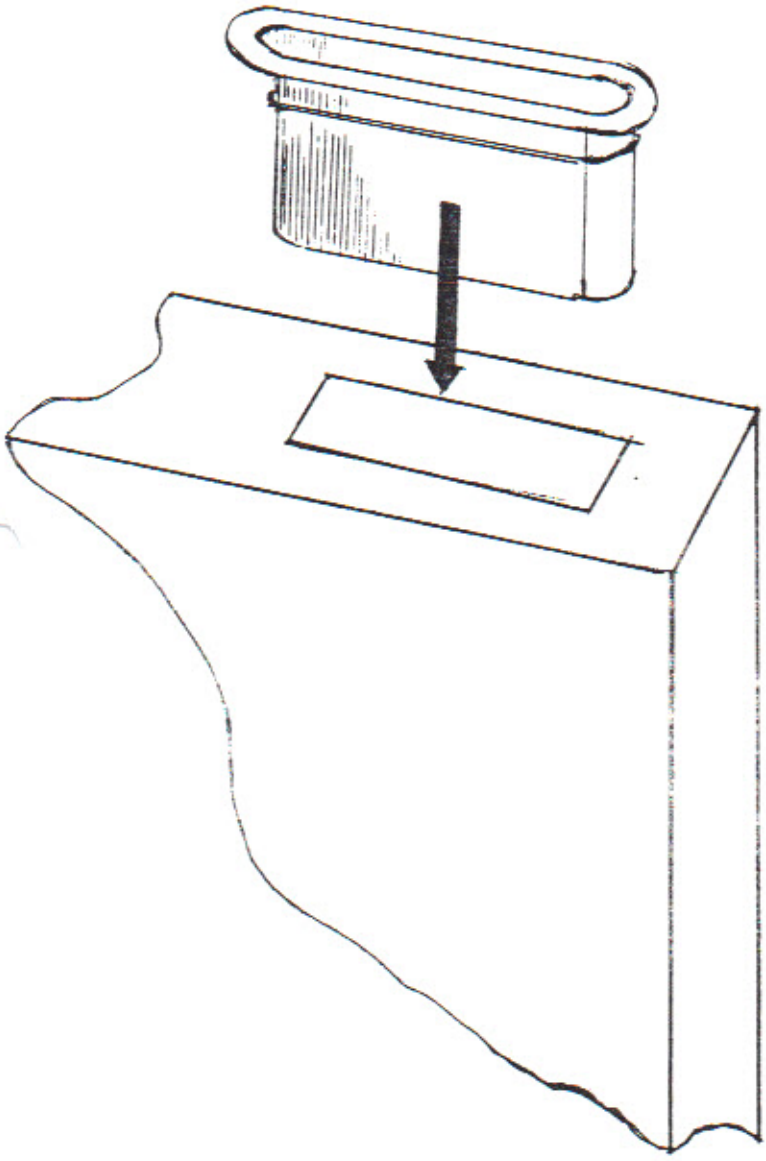

PLASTIC DOOR ROD GUIDES HAVE BEEN INCLUDED.

FOLLOW THE INSTRUCTIONS TO INSURE SMOOTH AND QUIET MOVEMENT OF DOOR LOCKING BARS.

1. INSERT PLASTIC GUIDE INTO SLOT PUNCHED IN TOP EDGE OF DOOR. MAKE CERTAIN THAT THE GUIDE IS FULLY SEATED AND SNAPPED PAST RETAINING EDGE FORMED IN GUIDE.

2. REPEAT PROCEDURE 1. INTO SLOT IN THE BOTTOM EDGE OF DOOR. NOTE THAT THE GUIDE IS INSERTED UPWARD IN THIS STEP.

3. INSERT LOCKING RODS THROUGH INSTALLED GUIDES AND PROCEED TO ATTACH RODS TO LOCKING "L" MODEL HANDLE, FOLLOWING INSTRUCTIONS INCLUDED FOR THIS PHASE OF INSTALLATION.